



Powerdot MIDI

□ 935-PM61W
■ 935-PM61




- A** - Removable installation
B - Permanent installation


CONTENT:

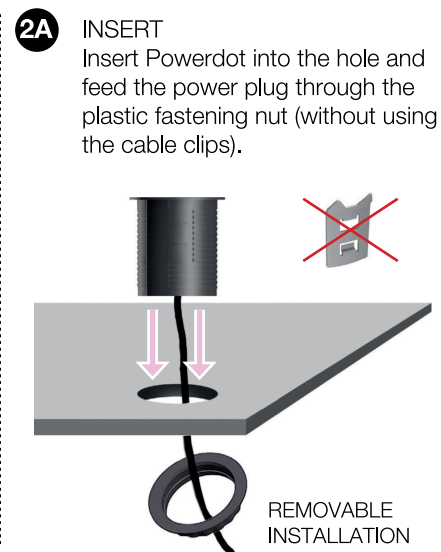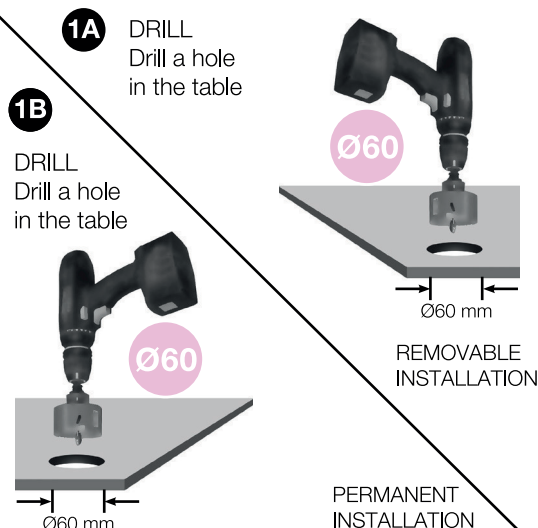

- 2B** ATTACH & INSERT (NON REMOVABLE)
Attach clips by guiding them into the side tracks. The clips will keep the product in place without the fastening nut. Push the Powerdot all the way down the hole. Lastly, plug it in to the wall socket.

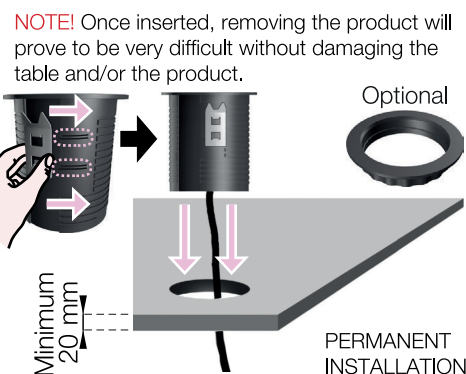

- HOW TO REMOVE (WITH CLIPS)**
To increase your chances of removing once installed with clips, turn the grommet clockwise. Until the clips re-position and loosen up.
- NOTE!** The table or product might get damaged during the process.

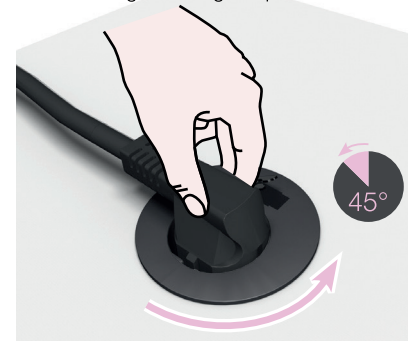

- PULL UPWARDS**
If you successfully loosened up the clips. Pull upwards until fully removed.

