

User Manual

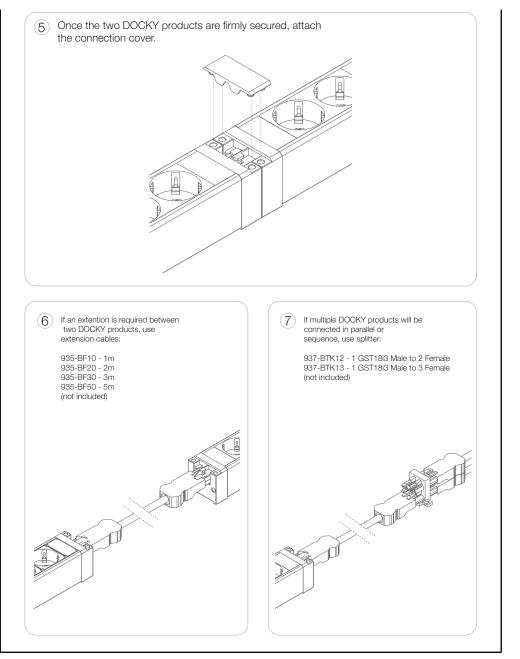

User manual



935-B600

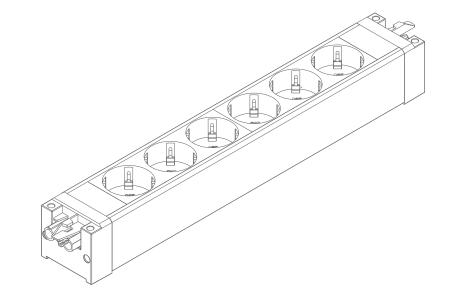



Before installation, all measurements and conditions must be verified on site. Neither KONDATOR nor any of its distributors can be held liable for product malfunction or other defects as a result of inproper installation.

User Manual



