

Uniform Sort⁰³


PARTS AND TOOLS

A	×1 PCE	
B	×3 PCS	
C	×2 PCS	
D	×2 PCS M6×10	
E	×1 PCE	

In order to achieve a correct mounting of Uniform Sort⁰³, you are advised to read and follow the instructions step by step. If there are incomprehensible steps, please let us know and we will get back to you.


STEP 1

Place the sliding nuts (C) approximately 300 mm apart. Push them into the toolbar T-slot, then turn to make the spring face away from you.

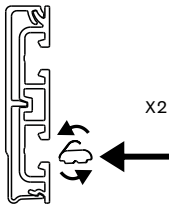


STEP 2

Hook the hanger (A) to the upper toolbar T-slot.

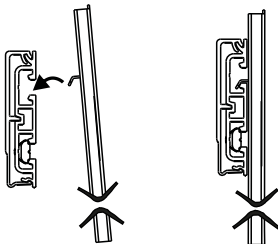


STEP 3

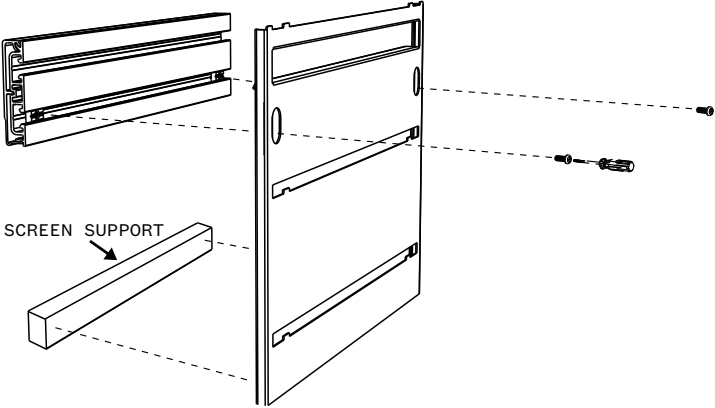

Align the screw holes of the sliding nuts (C) with each respective hole of the hanger (A). Once aligned and hooked, mount the screws.

STEP 4

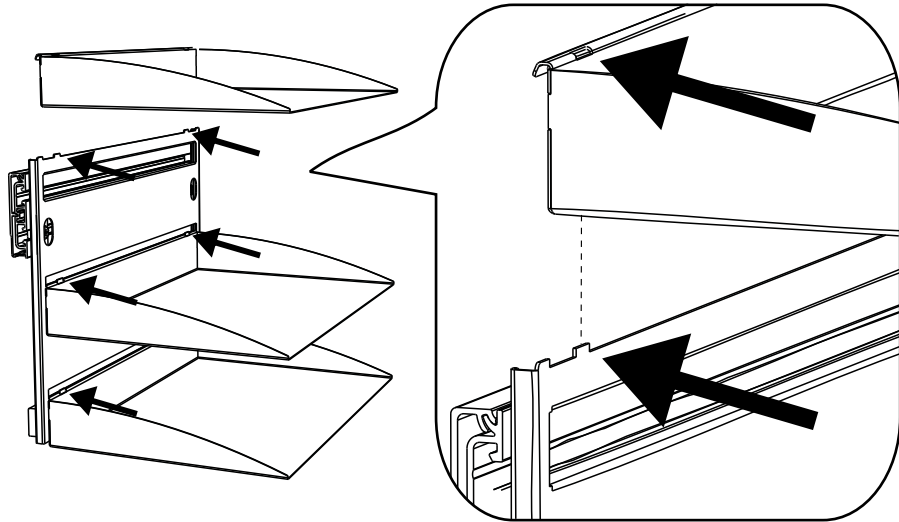

Attach the shelves (B) to the hanger (A) starting from the bottom. Fit the holes with the flaps of the hanger and repeat until fully assembled.