LiftPipe

Tack för att Ni har valt en produkt från Kondator.


Ägna gärna några minuter att läsa denna monteringsanvisning. Kontrollera noga innehållet före monteringen, enl beskrivning.

A: Kontrollera att bordskivans längd är lämplig för kabelrörets längd 1050mm.

B: Placera bordsfästet längst ner i centrumhållaren. Anbringa LiftPipe i önskvärd position direkt mot bordsskivans underside. Fäst bordsfästet med bifogade 4st skruv. Börja med de två yttre hålen, samt lossa kabelröret från centrumfästet, varvid de övriga två hålen fixeras med skruv.

C: Välj önskvärd höjd från bordskivans undersida (5mm. 35mm, alt 65mm)

D: Position vid kant under bordskiva alt annan valfri position.

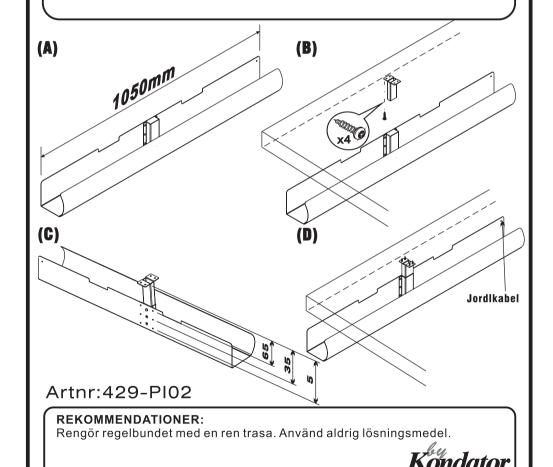


Before assembly

Please spend a minute to read this and follow the procedures step by step. Do not discard any of the packaging until you have checked all the parts and The package of fittings.

LiftPipe

- **A:** Make sure the table will fit to a 1050mm lenght of cable management, like this products.
- **B:** Put the holder into centerhole of the cable management. Attach the cable management to the tableboard and fix screws into the two outward holes. Release once again the cable management from the holder. Fix the two last screws into the holder. Ready to use!
- C: Choose desired heght form surface below the deskboard. (5mm,35mm,alt 65mm)
- **D**: Position by the edge of the deskboard or other optional position.

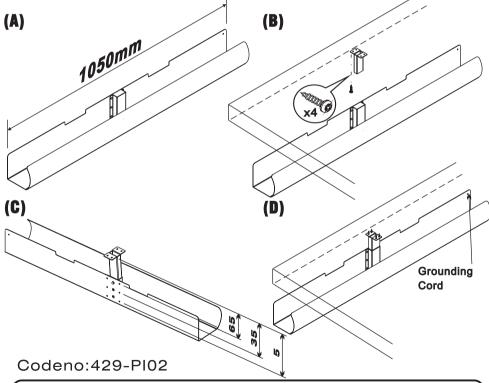

Caution:

Regular cleaning with a clean dry cloth is usually sufficient, but for stubborn marks, wipe over gently with a clean damp cloth. Never use strong detergents or abrasive cleaners as these may damage the surface finish of your furniture. There are many small components used in the construction of this unit. These loose items should be kept away from young children while

www.kondator.se

assembling your unit. Package contains 2 sets

2008.08.26 2008.08.26