Powerdot MICRO 935-PM30S 935-PM30G


- 935-PM30WM 935-PM30W





■ 935-PM30BM ■ 935-PM30



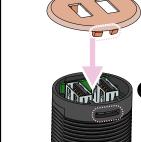


CLICK IT IN Place the cover on top and make sure it is aligned with the USB ports. Once aligned, push them together until it clicks. Ascertain that the

by checking the side slots. If the hooks, are visible then it will not come off.

Note that it is extremely difficult to remove the cover once attached without harming the product.




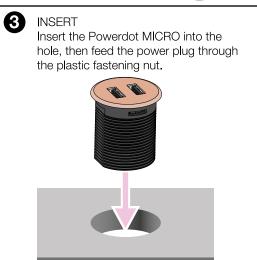


x1

cable


x1

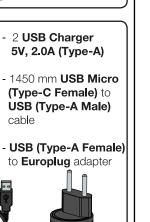

USE FASTENING NUT Turn the fastening nut as far up the thread as possible by turning clockwise until the product is fully rigid to the table/furniture.

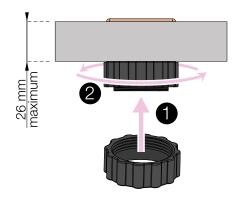

RE-ALIGN USB PORTS Plug the USB cable to each port to align the USB ports. Repeat for both USB ports.

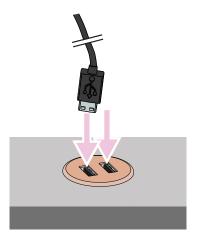

CONNECT AND PLUG IN Connect USB Micro cable to the grommet and to adapter. Lastly, plug it to a wall socket or powerstrip of your choice.



