
## Jser Manual 430-WA13

x1

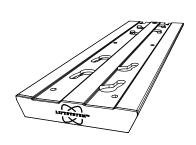

## **Liftsystem Track**

In order to achieve a correct mounting of LiftSystem Track, you are advised to read and follow the instructions step by step. If there are incomprehensible steps, please let us know and we will get back to you.

Part Check-List











Separate the LIFTSYSTEM™ cover 4 from the track 1 by simply gripping it from the bottom and pulling.

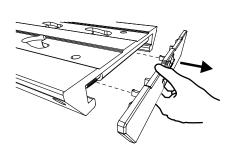

2 Examine the illustration below and proceed with the removal of the spring pin2. Remove from holes in two steps:






2 Direct outwards away the holes.

- www.kondator.se

## Assembly Guide

3 Position the track 1 to its planned position below the table and mount it using the screws 3.

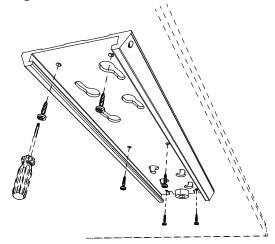

4 Be sure to insert the sleigh module, (e.g Laptop holder), into the track, before putting the spring pin② and the LIFTSYSTEM™ cover④ back to their respective positions.

